


NOTES:

- There may be some removal of debris on site per client's request, please factor this incidental when consulting with the client and when bidding on the project
- To correctly place the biologs 3" below the Ordinary High Water line (OHW), go to the following link on the MN DNR Lake Finder site:
<http://www.dnr.state.mn.us/lakefind/showlevel.html?id=62006700>
- Topsoil must be purchased from a quality source, fill is not allowed from other project sites.

Grading Cross-Section

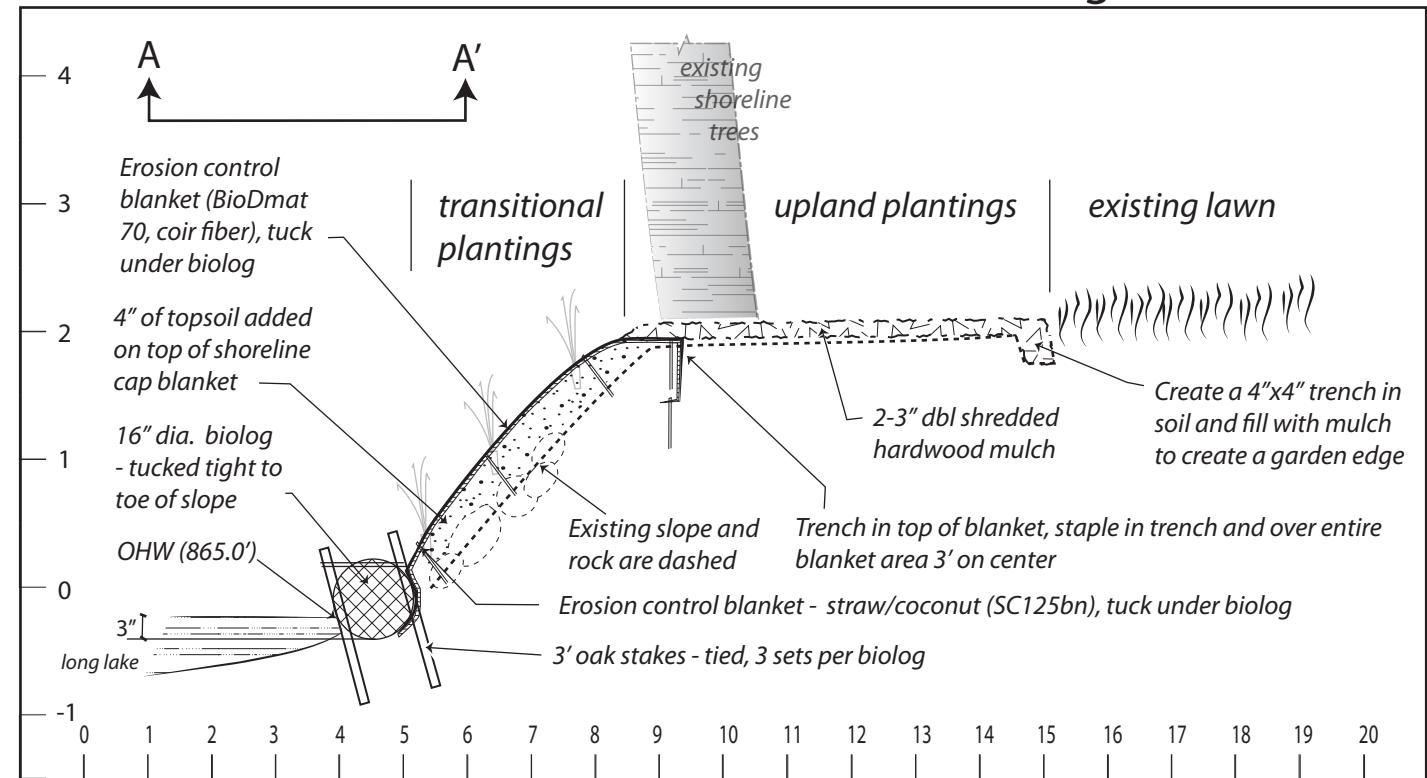

Added Topsoil Area
 - add soils on top of rock-cladded area of shoreline (see cross-section)

16" diameter biologs
 - entire length of shoreline



Shoreline Restoration : Site Prep and Grading	
Client:	John Broghammer 1527 14th Avenue NW New Brighton, MN 55112
District:	Ramsey Conservation District
Date:	05/22/10
Designer :	Metro Conservation Districts in Association with Ramsey Conservation District
Sheet 2 of 4	